

Netronome Flow Engine Series i8000/i4000 Safety Notice

READ THIS FIRST

1 Where to get more Information

The **Netronome Systems, Inc.** web site contains current information about the company, locations of offices, new and existing products, contacts for sales and service, plus technical support. To access the **Netronome Systems, Inc.** web site, enter this URL in your web browser: <http://www.netronome.com> [www.netronome.com]

2 Safety Information

The information provided is intended for the Series NFE-i8000/NFE-i4000. The Netronome Flow Engine (NFE) is intended to be SELV supplied via the Host Platform only. No external power connections must be made other than via the PCI Express slot on the Host Platform. The NFE hardware card should be installed in an enclosure that provides adequate shielding from Electromagnetic Radiation. The NFE is not to be connected directly to Telecommunications or Cable networks. When the NFE is operated with optical Small Form-factor Pluggable (SFP) devices, it is classified as a Class 1 Laser device. The NFE has not been tested or certified with a higher classification of Laser. Please adhere to the safety instructions and warnings provided with the Optical SFP Devices.

3 FCC Warning

This equipment has been tested and found to comply with the regulations for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the *Netronome Flow Engine Getting Started Guide*, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference.

4 Installation Instructions

Detailed installation instructions can be found on the distribution media included with this product, specifically in: */Documentation/NFE_GSG.pdf* under Section 4. Please also note the host platform compatibility information listed in Section 3 of the *Netronome Flow Engine Getting Started Guide*.

5 Documentation

All documentation applicable to the NFE, its operation, usage and support, as well as the Netronome Flow Driver (NFD) is located on the distribution media in the folder `/Documentation`.

6 Need more help?

Send an email detailing your information or support requirement to support@netronome.com or contact the nearest **Netronome Systems** technical support representative.